

# SpeedThru Headset Operation

**Adjust volume:** Sweep finger up or down flat surface to raise or lower volume.

**Page:** Touch and hold to speak exclusively to other headsets.



**Microphone boom** rotates up and over for left or right ear wearing style.

**Talk button:** Touch once to open communications. Touch again to mute your microphone.

## How to tighten a headset for fit



Headset size can be adjusted by sliding the headband in or out of the battery side. To adjust grip of the headset on your head, twist headband in and past the opposite side as shown.

Power button.  
Indicator light.



## Battery operation

“Low battery” voice prompt sounds every 30 seconds for 5 minutes and then the headset shuts off to protect the battery.

Push button up and pull out on bottom of battery door.



To charge batteries, simply place them in charger as shown. Green light indicates full charge.




Face the battery label in the same direction as the SpeedThru® logo on the headset.

# SpeedThru Base Station Operation

Optional greeter

Greeter					
M1	Breakfast	5:30	10:30	ON	
M2	Lunch	10:30	17:00	OFF	
M3	Dinner	17:00	22:00	OFF	
M4	Late Night	2:00		ON	
M5	Promo 1	5:30	10:30	OFF	
M6	Promo 2	10:30	17:00	ON	
M7	Closed	2:00	5:30	ON	
		M-T	F S S	?	Home

Enter PIN to unlock system

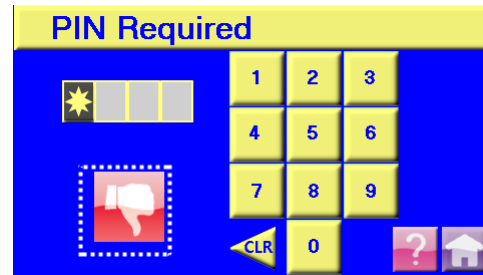

System settings



Register headsets and setting listen only mode

Register Headset	Listen Only	Delete Headset
1234567890123 LO	1234567890123	1234567890123
1234567890123	1234567890123	
1234567890123 LO	1234567890123	



4 Modes available



Wentworth phone number and firmware version info

Optional clock for greeter operation

Indicates car in drive-thru lane

Help button

Indicates selected sound mode: Day or Night

