


# SpeedThru Base Station Operation


Optional greeter




Enter PIN to unlock system

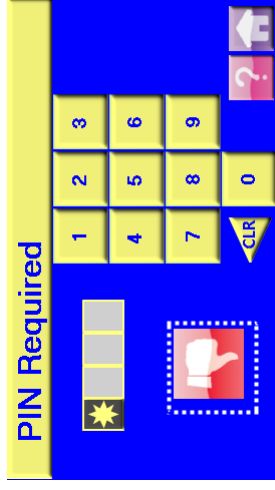


System Settings

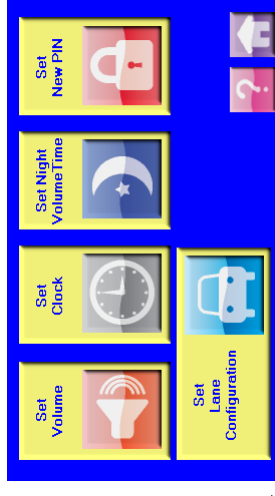

Register headsets and setting listen only mode

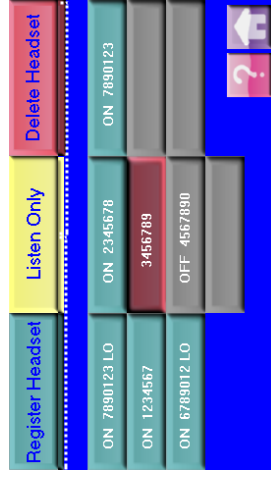

Wentworth phone number and firmware version info

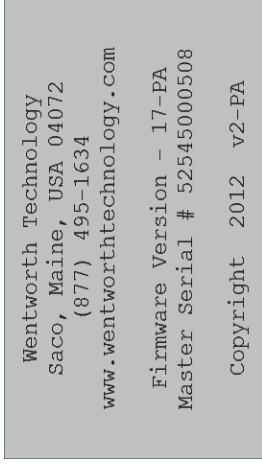

4 Modes available



Help button

Indicates selected sound mode: Day or Night

Optional clock for greeter operation  
 Indicates car in drive-thru lane



**Adjust volume:** Sweep finger up or down flat surface to raise or lower volume.

**Page:** Touch and hold to speak exclusively to other headsets.

**Microphone boom:** rotates up and over for left or right ear wearing style.

**Talk button:** Touch once to open communications. Touch again to mute your microphone.



**How to tighten a headset for fit**



## Battery operation

“Low battery” voice prompt sounds every 30 seconds for 5 minutes and then the headset shuts off to protect the battery.

Power button.  
Indicator light.



Push button up and pull out on bottom of battery door.



To charge batteries, simply place them in charger as shown. Green light indicates full charge.



Face the battery label in the same direction as the SpeedThru® logo on the headset.



Headset size can be adjusted by sliding the headband in or out of the battery side. To adjust grip of the headset on your head, twist headband in and past the opposite side as shown.

