


SpeedThru to Fast Track Timer

LMA200 or LMA-1250

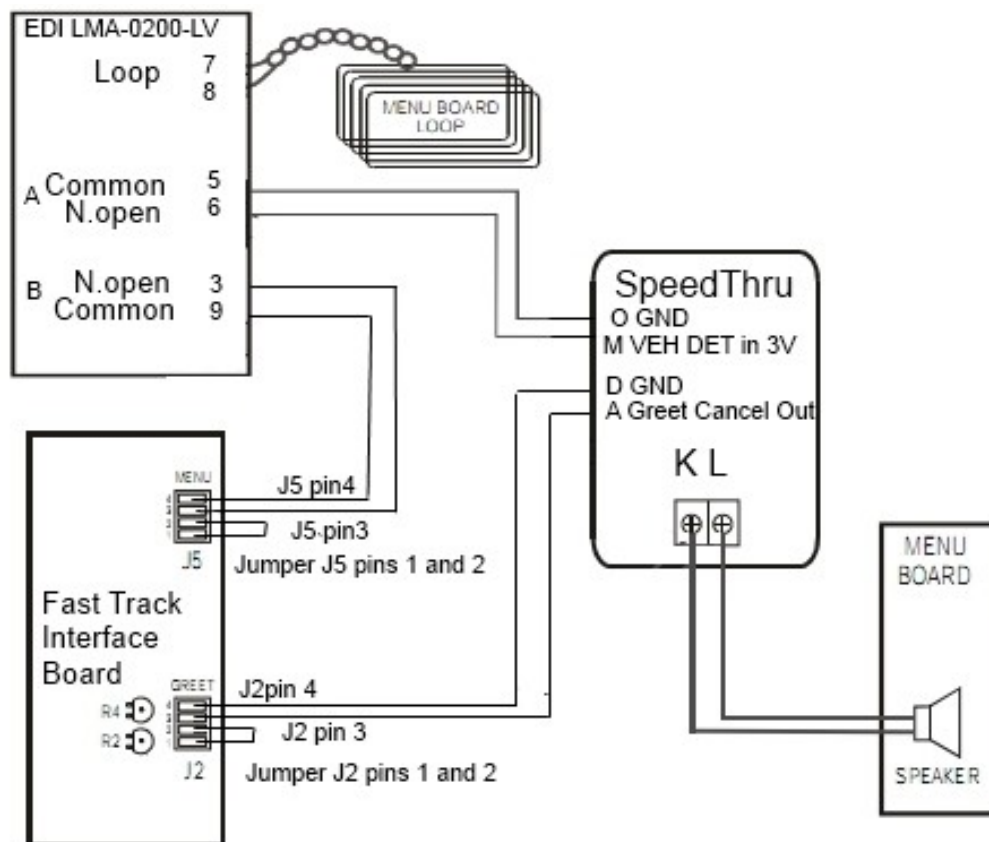

The Fast Track timer requires service window loop connections as well, these are not shown in this diagram. Refer to Fast Track timer installation instructions.

1. Make sure vehicle detect is in presence mode.
2. Make sure vehicle detector output B mode is set to duplicate output A.
3. Refer to Wentworth's technical support website for vehicle detector dip switch settings as the settings are different for the LMA200 and LMA1250.

Make sure all wire to wire connections are soldered. Do not use wire nuts.
All wire ends connected to terminal blocks must be tinned.